DA-E570

Wireless Audio with Dock

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

features

Dual Docking Audio Speaker System

Using the system's dual docking station, dock, charge, and then play either Samsung Galaxy devices or Apple devices through the system's built-in speakers.

aptX®

aptX enables high quality Bluetooth stereo audio, delivering wired audio quality wirelessly.

LICENSE

Made for iPod iPhone

iPad, iPhone, iPod, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

safety information

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

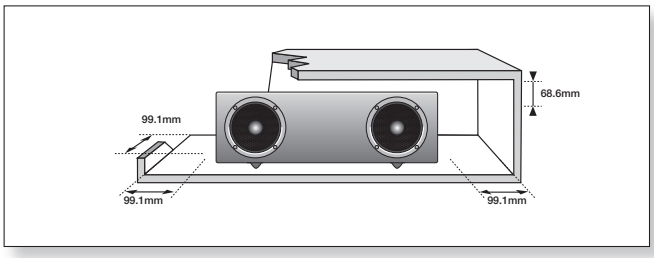

Ensure that the DC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation(70~100 mm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

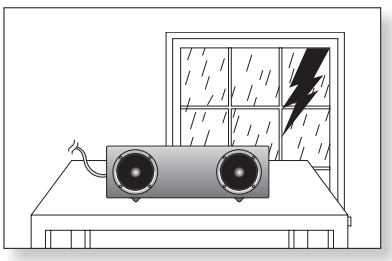

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

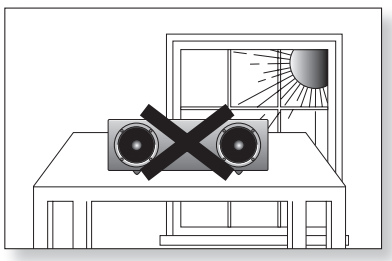

Do not expose the unit to direct sunlight or other heat sources. This could cause the unit to overheat and malfunction.

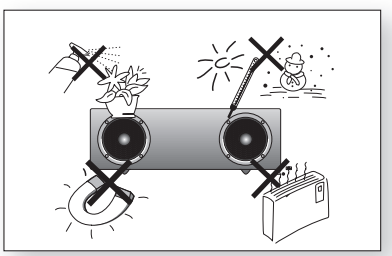

Protect the product from moisture (i.e. vases) , and excess heat (e.g.fireplaces) or equipment creating strong magnetic or electric fields Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. This product is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

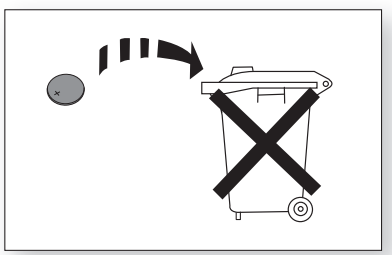

The batteries used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.

contents

ENG

FEATURES 2
2 Features
2 License

SAFETY INFORMATION 3
3 Safety warnings
4 Precautions

GETTING STARTED 6
6 Before reading the user's manual
6 What's included

DESCRIPTIONS 7
7 Top/Front/Rear Panel

REMOTE CONTROL 9
9 Tour of the remote control

POWER ON AND VOLUME CONTROL 10
10 Turning the Power on/off
10 Adjusting the volume

CONNECTIONS 11
11 Using the Spacer Cover
12 Connecting a device to the Dual Dock
13 Connecting an audio device using AUX IN
15 Connecting to Bluetooth devices

PLAYING 16
16 Using the docking mode with Samsung Galaxy and Apple Devices
17 Using the Bluetooth mode

FUNCTIONS 18
18 Advanced functions

TROUBLESHOOTING 19
19 Troubleshooting

APPENDIX 20
20 Specifications

getting started

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help a function operate.

Safety Instructions and Troubleshooting

1) Familiarise yourself with the Safety Instructions before using this product. (See page 3)
2) If a problem occurs, check Troubleshooting. (See page 19)

Copyright

©2012 Samsung Electronics Co.,Ltd.

All rights reserved; no part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED

Check for the supplied accessories shown below.

Remote Control / Lithium Battery (3V)

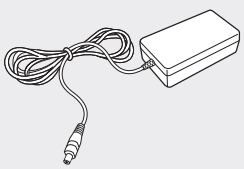

Power Adapter

User Manual



Spacer Cover/Protection Cover

Cloth

- The appearance of the accessories may differ slightly from the illustrations above.

descriptions

TOP/FRONT/REAR PANEL

<TOP>

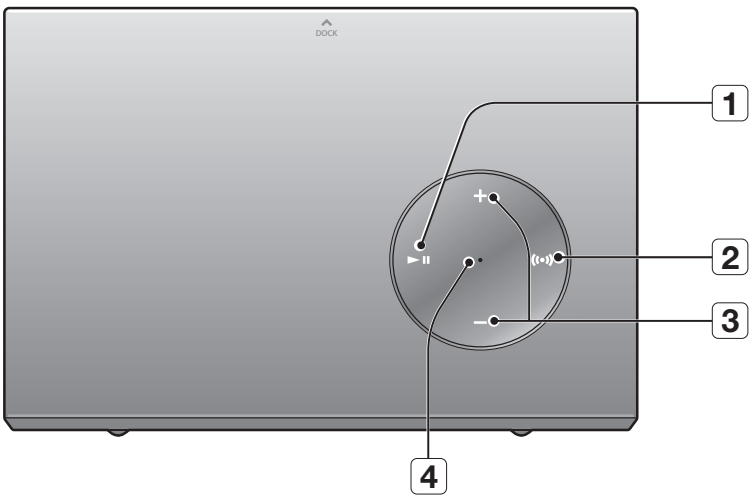

<FRONT>

<REAR>

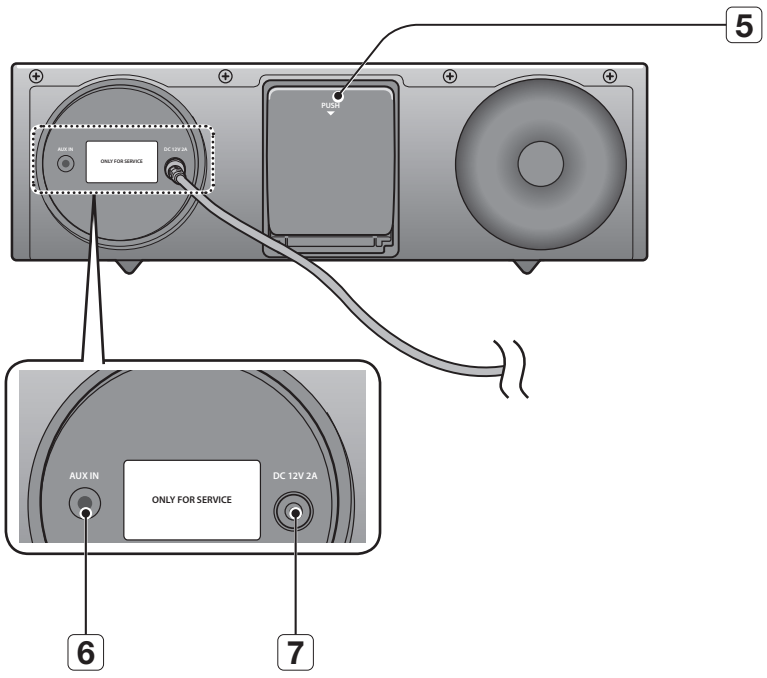

1	PLAY/PAUSE BUTTON	Play or pause a music file.
2	BASS BUTTON	Optimise the sound based on your tastes.
3	VOLUME +/- BUTTON	Controls the volume level.
4	STANDBY LED	The standby LED lights up in standby mode. The standby LED turns off when the power of the unit turned on.
5	DUAL DOCK	Provides a 5 pin dock for Samsung Galaxy devices and a 30 pin dock for Apple devices.
6	AUX IN	Connect to the Analog output of an external device.
7	DC 12V	Connect the unit's DC adapter to this jack.

- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.

- This unit can connect to mobile devices with high audio output levels. When you connect this unit to external devices with high output levels, it may lower the audio output to protect the amp and speakers.
- When disconnecting the power cable from the wall outlet, hold the plug.
  Do not pull the cable.

remote control

TOUR OF THE REMOTE CONTROL

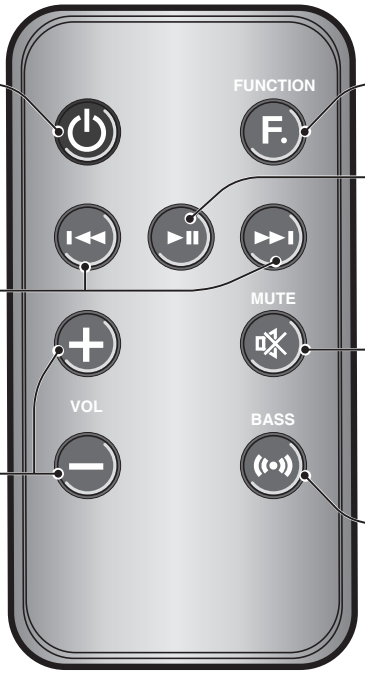

POWER BUTTON
Turns the unit on and off.

FUNCTION BUTTON
Selects the Function mode.

PLAY/PAUSE BUTTON
Play or pause a music file.

CONTROL BUTTON
Search for the next or previous music file.

MUTE BUTTON
Mutes the sound from this unit. Press again to restore the sound to the previous volume level.

VOLUME
Adjusts the volume level of the unit.

BASS BUTTON
Optimise the sound based on your tastes.

Installing battery in the Remote Control

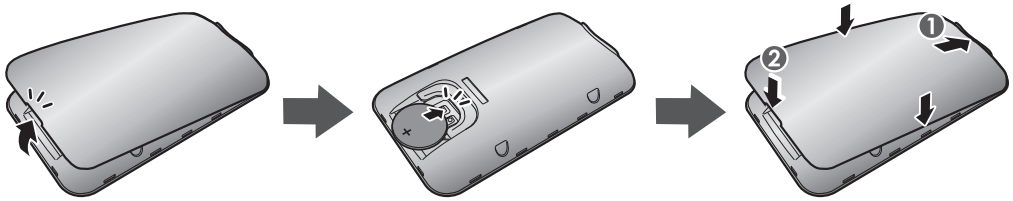

1. Open the cover of the remote control by putting your fingernail into the gap between the cover and body of the remote control. Then, lift the cover and separate it completely.
2. Install a 3V Lithium battery. Insert the battery into the battery compartment with the + side facing up.
3. Fit the remote control's cover to the remote control. Next, lower the cover so that it is flush with the body of the remote, and then press the cover into the body by pushing the edges down with your hand.

- Be careful not to catch your fingernail in the gap when you lift the cover. You can damage your fingernail.

Operation Range of the Remote Control

You can use the remote control up to 23 feet (7 meters) in a straight line from the unit. You can also operate the remote at a horizontal angle of up to 30° from the remote control sensor.

power on and volume control

TURNING THE POWER ON/OFF

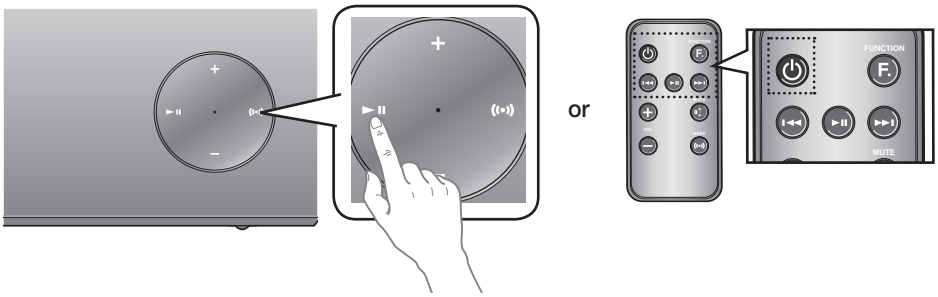

1. To turn on this unit, press any button on the unit's top panel when the unit is in Standby mode.

or,

Press **POWER** on the remote control.

2. To turn off this unit, press the ►II button on the unit's top panel for more than 3 seconds.

or,

Press **POWER** on the remote control again.

- The standby LED is on when AC Plug is connected to the wall outlet and the Power of the unit is off. The standby LED is off when the power of the unit is on.
- The power of the unit automatically turns off if there is no input for 20 minutes.

ADJUSTING THE VOLUME

Use +, - buttons to adjust the volume. As you adjust the volume, the Input mode LED blinks.
The LED remains on in case you increase the volume when it has already been set to maximum, or decrease the volume when it has already been set to minimum.

Press the **VOL +/–** button on the right side of the top panel.

or,

Press **VOL +/–** on the remote control.

- The volume level increases or decreases when you press VOL +/–.
- You can also use the volume controls of devices connected using the Dual Dock or Bluetooth to control the volume. However, your ability to control the volume using the volume controls of devices connected using Bluetooth may be limited.

connections

USING THE SPACER COVER

Use the Spacer Cover when you attach Galaxy or Apple devices to the Dual Dock that do not have protective cases. Or use it for stable installation of your device considering the shape of the device.

The Dual Dock also comes with a protective cover for the 30-pin Apple device connector. Use the protective cover for the 30-pin connector when you attach the 5-pin Samsung Galaxy device.

See the illustrations below for additional instructions.

<For Apple Device Users>	<For Galaxy Device Users>
Use when you have protective case on your device or for stable installation considering the shape of device.	
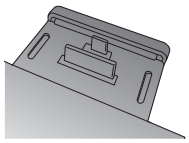	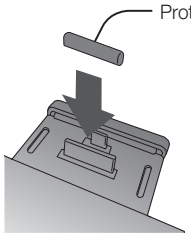
Use for the devices without protective cases.	
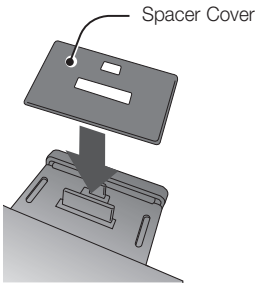	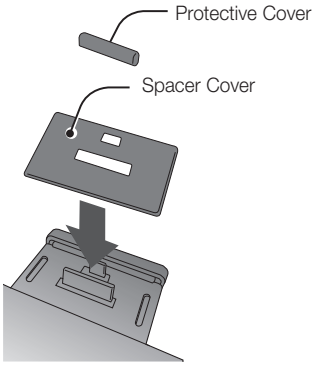

- It is impossible to attach a device to the Dual Dock that has a case thicker than 1.5mm or an unusual rounded bottom.

CONNECTING A DEVICE TO THE DUAL DOCK

How to connect a device to the Dual Dock.

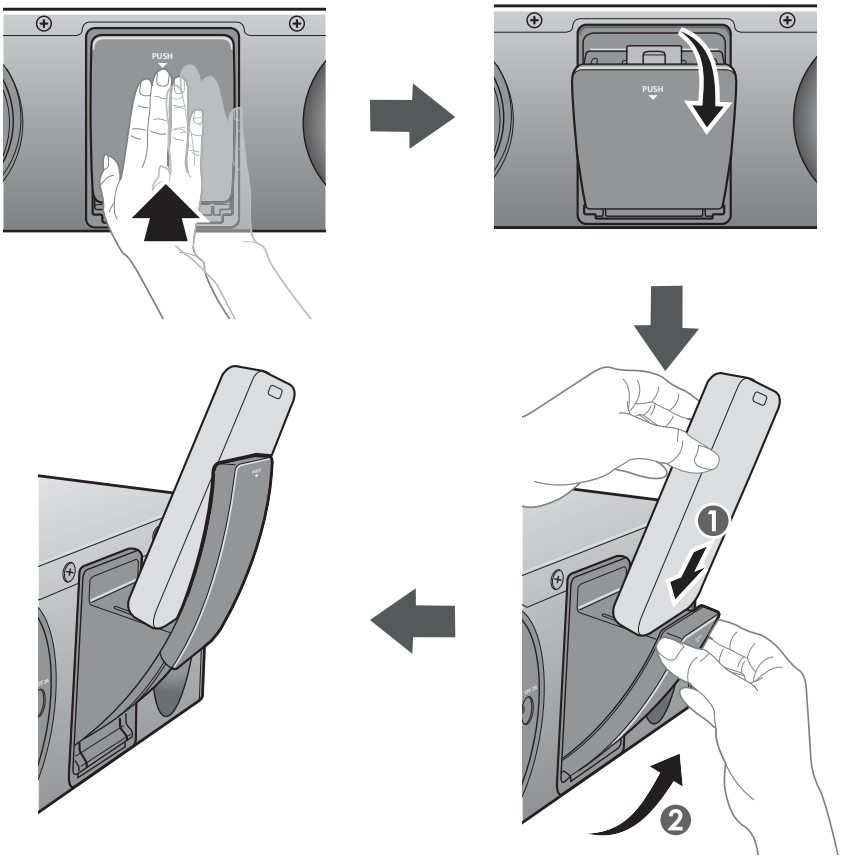

1. The **DUAL DOCK** is located on the back of the product. To open, push it in gently.

2. If you have a Samsung Galaxy device, connect the device to the 5 pin (smaller) connector to connect to the Dual Dock. If you have an Apple device, connect the device to the 30 pin (larger) connector on the Dual Dock.

3. Lift the device support up as shown to prevent the device from sliding or falling off the Dual Dock.

- Turn on your Samsung Galaxy device before you attach it to the Dual Dock.
- This unit doesn't support the simultaneous docking of Samsung Galaxy and Apple devices.
- Connect your Samsung Galaxy or Apple device to the Dual Dock before starting Docking mode. (See page 16)

CONNECTING AN AUDIO DEVICE USING AUX IN

This section explains how to connect the unit to an audio device.

This unit is equipped with one audio analog jack for connecting an audio device.

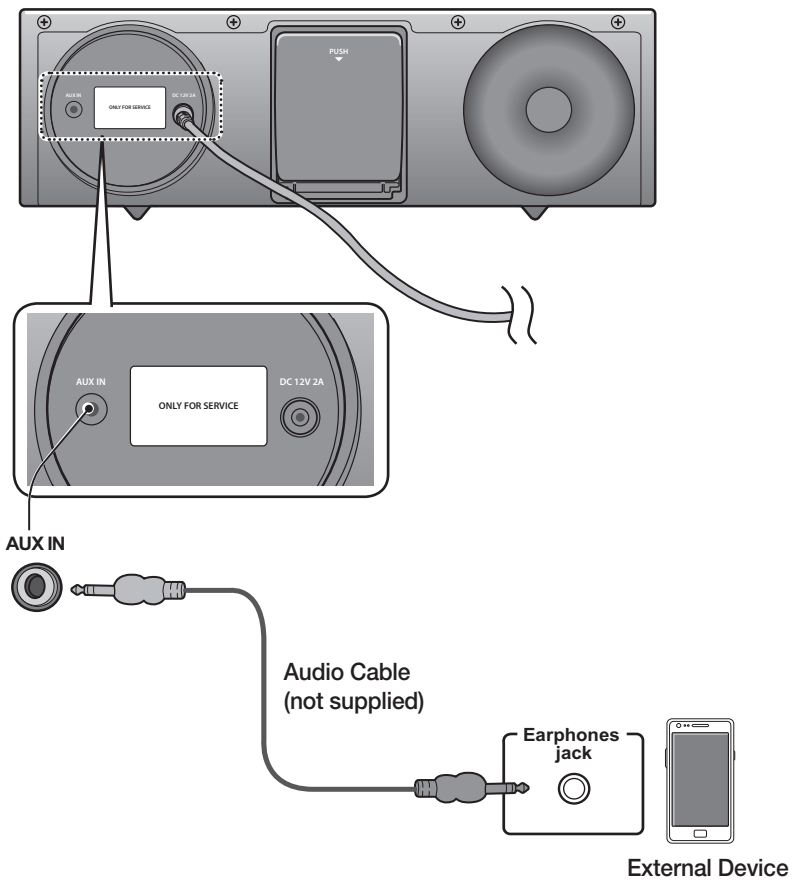

AUX IN

Connect AUX IN (Audio) on the back of the unit to the earphone jack of the external device or audio device.

If connected to an external device via AUX input while your Samsung Galaxy device is docked or connected to a Bluetooth device at the same time, the input source switches between the AUX and Samsung Galaxy or Bluetooth device by tapping the PAUSE button on the Samsung Galaxy / Bluetooth device. Tap it again to switch to the other input source.

- Use the Function key on the remote control to switch between connected devices, if there are multiple devices connected to the Docking station.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

BLUETOOTH

You can connect the Wireless Audio with Dock to Bluetooth devices and enjoy music with high quality stereo sound, all without wires!

What is Bluetooth?

Bluetooth technology lets Bluetooth-compliant devices interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Wireless Audio with Dock.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or by office partitioning.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Keep the Wireless Audio with Dock and the Bluetooth device close together when pairing.
- The further the distance between the Wireless Audio with Dock and Bluetooth device, the worse the quality. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when the Bluetooth device is close to the set. The connection is automatically cut off if the Bluetooth device moves out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

- You may be required to enter a PIN code (password) when connecting the Bluetooth device to the Wireless Audio with Dock. If the PIN code input window appears, enter <0000>.
- The Wireless Audio with Dock supports SBC data (44.1kHz, 48kHz).
- The AVRCP feature is not supported.
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect to a Bluetooth device that supports only the HF (Hands Free) function.
- Only one Bluetooth device can be paired at a time.
- Once you have turned off the Wireless Audio with Dock and the pairing is disconnected, the pairing will not be restored automatically. To reconnect, you must pair the devices again.
- The Wireless Audio with Dock may not search or connect properly in the following cases:
  - If there is a strong electrical field around the Wireless Audio with Dock.
  - If several Bluetooth devices are simultaneously paired to the Wireless Audio with Dock.
  - If the Bluetooth device is turned off, not in place, or malfunctions
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.

CONNECTING TO BLUETOOTH DEVICES

This section explains how to connect the Wireless Audio with Dock to Bluetooth compatible devices.

To connect the Wireless Audio with Dock to a Bluetooth device

Before you begin, confirm that your Bluetooth device supports the Bluetooth compliant stereo headset function.

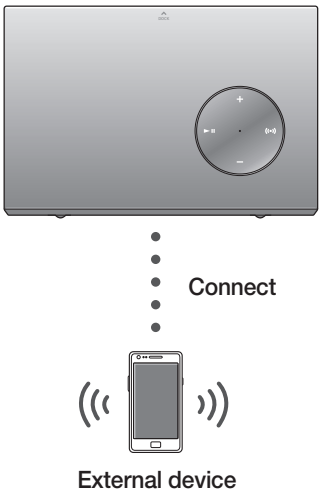

1. Select the Bluetooth menu on your Bluetooth device.
   (Refer to the Bluetooth device's user manual for instructions.)
2. Scan or search for All Devices or for Headsets.
   - You will see a list of devices.
3. Select "**[Samsung]W_Audio XXXXXX**" from the searched list.
   - If the Bluetooth device fails to pair with the Wireless Audio with Dock, delete the "[Samsung]W_Audio XXXXXX" found by the Bluetooth device, and search for the Wireless Audio with Dock again, and then repeat Steps 1, 2, and 3.

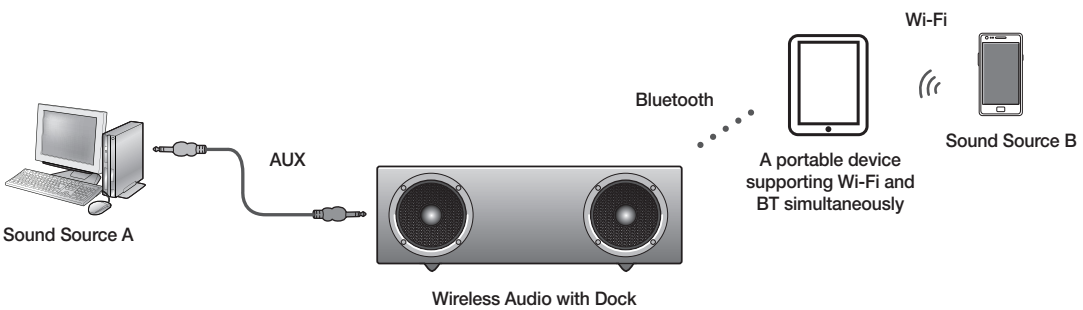

- When the AUX and Bluetooth operate at the same time as shown above, the sound may come from both simultaneously.

USING THE DOCKING MODE WITH SAMSUNG GALAXY AND APPLE DEVICES

Connect the Samsung Galaxy or Apple device to the Dual Dock. (See page 12)

<Samsung Galaxy Devices>

To use your Samsung Galaxy series device with the Dual Dock, you must download and install the Docking Mode application from the Android Market on the device. To download, follow these steps:

1. Tap the Play Store (Android Market) icon on the Samsung Galaxy device's main screen.
2. Tap the search icon on the screen to access the search bar.
3. In the search bar, type in the [**Samsung Wireless Audio with Dock**], and then search.
4. In the search result list, find, and then tap [**Samsung Wireless Audio with Dock**] to start downloading.
5. Tap [**install**].

To play music, follow these steps:

1-1. If you start the app when the Wireless Audio with Dock is the only device for the Bluetooth connection,
selecting PLAY in your device automatically establishes the Bluetooth connection to the Wireless Audio with Dock and the unit plays music.

1-2. If there are multiple devices for Bluetooth connection including Wireless Audio with Dock,
1) When you start the app, the list of the devices which you can connect to the Wireless Audio with Dock will appear.
2) Play music after connecting to the Wireless Audio with Dock by selecting it on the list of devices.
- If there exists a Bluetooth device paired to the Wireless Audio with Dock before, it will not appear in the list and be connected automatically.

2. If you replace the Wireless Audio with Dock which you have paired to your mobile device, you should delete the remaining settings saved in your device before pairing to the new one.
• → [**Clear data**].

- Once you started the application, running is not disturbed by charging your mobile device with an ordinary charger.
- When you connect other device to the Wireless Audio with Dock after connecting Samsung Galaxy device in docking mode, you may have to turn off the Bluetooth mode of the Samsung Galaxy device.
- If you have trouble connecting the Samsung Galaxy device to the Dual Dock, turn off the devices's Bluetooth mode.

<Apple Devices>

1. Select the mode as described above, and then connect the Apple device to the Dual Dock as described in Connecting a Device to the Dual Dock (Page 12). You will hear a ringing sound.
2. Select the <**Music**> menu in the main screen of the Apple device.
3. Select and play the desired music.
• The music will play through the Wireless Audio with Dock's speakers.

- While playing a video with your device, Play/Pause/Next/Back operations may not be available. Use the button on your device to operate it.

Compatibility list (Apple Device)

Docking mode compatible iPod/iPhone models
Update the software of your iPod/iPhone to the latest version before using it with this unit.

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPod classic

• Depending on its version of iPod Software, your device may not be compatible or may operate abnormally.

※ If you connect an incompatible Apple device, the Standby LED will blink.

USING THE BLUETOOTH MODE

Connect the Bluetooth device to the Wireless Audio with Dock. (See page 15)

To connect your Bluetooth device when the Wireless Audio with Dock is in Bluetooth mode, search for the Wireless Audio with Dock on the device's Bluetooth list. Select the Wireless Audio with Dock, and then connect. Once the Wireless Audio with Dock has connected, select and play the desired music.

The music will play through the Wireless Audio with Dock's speakers.

- If you want to change the device which is connected through Bluetooth mode to other device, disconnect the existing device and try to connect to the other device which you want to use.
- While in Bluetooth communication, Play/Pause/Next/Back operations may not be available depending on used mobile device and application.
- Operating Bluetooth device paired to the Wireless Audio with Dock may cause stuttering if operated while the Wireless Audio with Dock is playing back from AUX input.

To disconnect the Bluetooth device from the Wireless Audio with Dock

You can cancel Bluetooth pairing from the Wireless Audio with Dock. For instructions, see the Bluetooth device's user manual.

• The Wireless Audio with Dock will be disconnected.

- The Bluetooth connection only works when the Bluetooth device is close to the set. The connection is automatically cut off if the Bluetooth device moves out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- If the Bluetooth device comes back into the effective range, you can restart to restore the pairing with the Bluetooth device.

ADVANCED FUNCTIONS

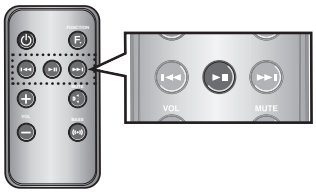

Play/Pause

During playback, press the ►II button.

- Press the ►II button to stop playing the file temporarily. Press the ►II button again to play the selected file.

▪ This function does not operate in Aux mode.

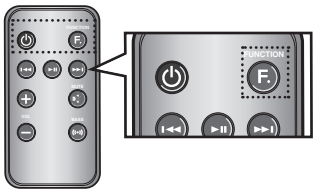

Using function

Change the mode to switch to Docking and AUX sources.

Press **FUNCTION** on the remote control of this unit.

- Each time the button is pressed, the selection changes as follows : iPod (iPhone) ➞ Galaxy (Bluetooth) ➞ AUX mode

▪ Check the function you want to use by pressing the Function button on the remote control when multiple devices are connected to the product simultaneously.

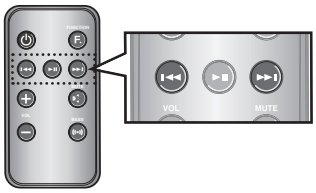

Skip Forward/Back

During playback, press the I◄◄,►►I button.

- When there is more than one file and you press the ►►I button, the next file is selected.
- When there is more than one file and you press the I◄◄ button, the previous file is selected.

▪ This function does not operate in Aux mode.

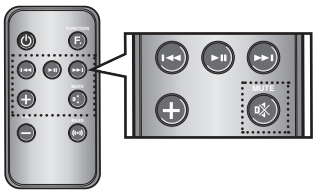

Muting the sound

This is useful when answering a doorbell or telephone call.

1. To mute sound of this unit, press the **MUTE** ( ) button of the remote control.
2. Press **MUTE** ( ) on the remote control again (or press **VOLUME +/–**) to restore the sound.

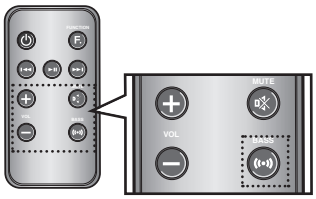

Using the BASS function

Lets you optimise the bass sound according to your tastes.

Press **BASS** on the remote control of this unit.

- Each time the button is pressed, the selection changes as follows : BASS ON ➞ OFF

troubleshooting

Before requesting service, please check the following.

Symptom	Check	Remedy
The unit will not turn on.	• Is the power cord plugged into the outlet?	• Connect the power plug to the outlet.
A function does not work when the button is pressed.	• Has the Wireless Audio with Dock or the remote been exposed to static electricity?	• Disconnect the power plug and connect it again.
Sound is not produced.	• Is the unit properly connected to device? • Is the Mute function on? • Is the volume set to minimum?	• Connect it correctly. • Press the Mute button to cancel the function. • Adjust the volume.
The remote control does not work.	• Are the batteries drained? • Is the distance between remote control and main unit too far?	• Replace with new batteries. • Operate closer to the main unit.

appendix

SPECIFICATIONS

Model name	DA-E570

GENERAL	Weight	2.0 kg
	Dimensions (W x D x H)	299.7 x 169.9 x 94 mm
	Operating temperature range	+5°C~+35°C
	Operating humidity range	10 % to 75 %
AMPLIFIER	Rated output power	5W/CH, 4OHM, THD = 10%, 1kHz
	Input sensitivity/Impedance	800mV/20Kohm
	S/N ratio (analog input)	65 dB
	Separation(1kHz)	60 dB

FREQUENCY RESPONSE	Analog input	20Hz~22kHz(±3 dB)

DOCKING RATING	iPod	5 V 1.0 A
	Galaxy	5 V 1.0 A

***** S/N ratio, distortion, separation, and usable sensitivity are based on measurement using AES (Audio Engineering Society) guidelines.

***** Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

ENERGY STAR

DA-E570

Wireless Audio with Dock

دليل المستخدم

تخيل الإمكانات

شكرًا لك على شرائك منتج Samsung هذا.
لتلقي خدمة على الوجه الأكمل، يرجى تسجيل المنتج على

www.samsung.com/register

SAMSUNG

المزايا

نظام سماعات Docking Audio المزدوج

باستخدام قاعدة الإرساء المزدوج الخاصة بالنظام، يمكنك إرساء جهاز Galaxy من Samsung أو جهاز Apple، وشحنه، ثم تشغيله من خلال السماعات المدمجة بالنظام.

aptX®

توفر aptX صوت استريو بلوتوث عالي الجودة، حيث توفر جودة الصوت السلكية عبر الاتصال اللاسلكي.

الترخيص

Made for iPod iPhone

تعد iPad وiPhone وiPod وiPod nano وiPod shuffle وiPod touch علامات تجارية خاصة بشركة Apple Inc.، مُسجلة في الولايات المتحدة والدول الأخرى.

معلومات السلامة

تحذيرات السلامة

لتقليل مخاطر التعرض لصدمة كهربية، لا تقم بإزالة الغطاء (أو الغطاء الخلفي).
فلا توجد أجزاء يمكن للمستخدم صيانتها بالداخل. وإنما يُرجى ترك عملية الصيانة لموظفي الصيانة المؤهلين.

يشير هذا الرمز إلى وجود "جهد كهربي خطير" داخل المنتج يمثل خطر التعرض لصدمة كهربية أو إصابة جسدية.

يشير هذا الرمز إلى وجود إرشادات هامة مرفقة مع المنتج.

تحذير : للحد من خطر نشوب الحريق أو التعرض لصدمة كهربية، لا تعرض هذا الجهاز للأمطار أو الرطوبة.

تنبيه : للحيلولة دون وقوع الصدمات الكهربية، قم بمطابقة الشفرة العريضة للقابس مع الفتحة العريضة ثم أحكم إدخالها.
• ينبغي أن يكون هذا الجهاز متصلاً دومًا بمأخذ التيار المتردد مع وجود وصلة أرض واقية.
• لفصل الجهاز عن التيار الكهربي الرئيسي، يجب سحب القابس من مقبس التيار الكهربي الرئيسي ولذا ينبغي أن يكون قابس التيار الكهربي الرئيسي جاهزًا للتشغيل.

تنبيه
• لا تُعرض هذا الجهاز لقطرات السوائل أو تناثرها. لا تضع أشياء مليئة بالسوائل، كآنية الزهور على الجهاز.
• لإيقاف تشغيل هذا الجهاز تمامًا، يجب سحب قابس التيار الكهربي من المقبس الجداري. ولهذا، يجب أن يكون الوصول إلى قابس التيار الكهربي سهلًا ومتاحًا دائمًا.

الاحتياطات

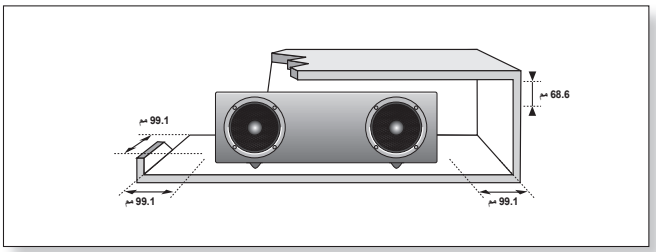

تأكد من توافق مصدر التيار المستمر بالمنزل مع متطلبات التيار الكهربي المدرجة على ملصق التعريف الموجود بالجهة الخلفية للمنتج. ثبت المنتج أفقيًا، على قاعدة مناسبة (قطعة أثاث) مع ترك مساحة كافية حوله للتهوية (من ٧٠ إلى ١٠٠ مم).
تأكد من عدم تغطية فتحات التهوية. لا تضع الجهاز على المكبرات أو الأجهزة الأخرى التي قد تصبح ساخنة. تم تصميم المنتج لأغراض الاستخدام المستمر. لإيقاف تشغيل الوحدة تمامًا، افصل قابس التيار المتردد من المأخذ الجداري. افصل الوحدة عن التيار الكهربي إذا كنت تنوي عدم تركها لفترة طويلة بدون استخدام.

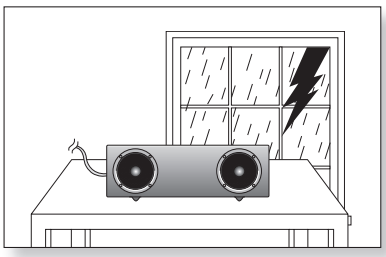

أثناء العواصف الرعدية، افصل مقبس التيار المتردد عن المأخذ الجداري. فقد تتسبب حالات الجهد الكهربي بالغ الشدة الناجم عن البرق في تلف الوحدة.

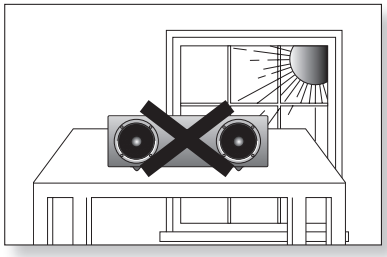

لا تعرض الوحدة لأشعة الشمس المباشرة أو مصادر الحرارة الأخرى. قد يؤدي ذلك إلى زيادة سخونة الوحدة وتعطلها.

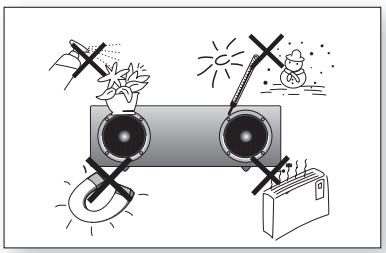

قم بحماية المنتج من الرطوبة (أي، آنية الزهور) والحرارة المفرطة (على سبيل المثال، المواقد) أو الأجهزة التي تصدر مجالات مغناطيسية أو كهربية قوية وافصل كابل التيار الكهربي عن مصدر التيار المتردد في حالة تعطل الوحدة.
المنتج غير مخصص للاستخدام في الأغراض الصناعية. يقتصر استخدام هذا المنتج على الاستخدام الشخصي فقط.
قد يحدث التكاثف إذا ما تم تخزين المنتج في درجات حرارة منخفضة.
في حالة نقل الوحدة خلال فصل الشتاء، انتظر لمدة ساعتين تقريبًا حتى تصل درجة حرارة الوحدة إلى درجة حرارة الغرفة قبل الاستخدام.

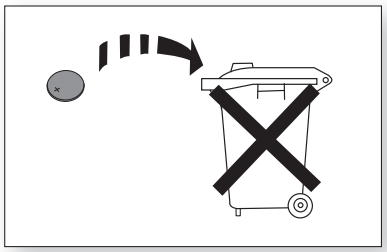

تحتوي البطاريات المستخدمة مع هذا المنتج على مواد كيميائية ضارة بالبيئة.
لا تتخلص من البطاريات في النفايات المنزلية العامة.

ARA

المحتويات

المزايا ٢

٢ المزايا
٢ الترخيص

معلومات السلامة ٣

٣ تحذيرات السلامة
٤ الاحتياطات

بدء التشغيل ٦

٦ قبل قراءة دليل المستخدم
٦ محتويات العبوة

المواصفات ٧

٧ اللوحة العليا/الأمامية/الخلفية

وحدة التحكم عن بعد ٩

٩ استعراض وحدة التحكم عن بُعد

التشغيل والتحكم بمستوى الصوت ١٠

١٠ التشغيل/إيقاف التشغيل
١٠ ضبط مستوى الصوت

التوصيلات ١١

١١ استخدام غطاء المباعد
١٢ توصيل جهاز بنظام الإرساء المزدوج
١٣ توصيل جهاز الصوت باستخدام AUX IN (مدخل إضافي)
١٥ التوصيل بأجهزة بلوتوث

التشغيل ١٦

١٦ استخدام وضع الإرساء مع أجهزة Samsung Galaxy وأجهزة Apple
١٧ استخدام وضع البلوتوث

الوظائف ١٨

١٨ وظائف متقدمة

استكشاف الأخطاء وإصلاحها ١٩

١٩ استكشاف الأخطاء وإصلاحها

الملحق ٢٠

٢٠ المواصفات

بدء التشغيل

قبل قراءة دليل المستخدم

لاحظ المصطلحات التالية قبل قراءة دليل المستخدم.

الرموز المستخدمة في الدليل

الرمز	المصطلح	التعريف
	تنبيه	يشير إلى تلك الحالة التي لا تعمل فيها إحدى الوظائف أو التي قد يتم فيها إلغاء الإعدادات.
	ملاحظة	يشير إلى تلميحات أو إرشادات حول الصفحة التي تساعد على تشغيل وظيفة ما.

تعليمات السلامة واستكشاف الأخطاء وإصلاحها

١) تعرف على إرشادات السلامة قبل استخدام هذا المنتج. (انظر الصفحة ٣)
٢) في حالة حدوث مشكلة، راجع استكشاف الأخطاء وإصلاحها. (انظر الصفحة ١٩)

حقوق النشر

حقوق النشر ©٢٠١٢ لصالح شركة Samsung Electronics Co.,Ltd.
جميع الحقوق محفوظة، لا يجوز إعادة إنتاج أو نسخ دليل المستخدم بالكامل أو أي جزء منه دون الحصول على إذن كتابي مسبق من شركة Samsung Electronics Co.,Ltd.

محتويات العبوة

تحقق من وجود الملحقات المرفقة الموضحة أدناه.

وحدة التحكم عن بُعد / بطارية ليثيوم (3V)

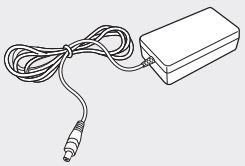

مهايئ التيار الكهربي

دليل المستخدم



غطاء الفواصل/غطاء الحماية

قماش

- قد يختلف مظهر الملحقات قليلاً عن التوضيحات الواردة بالأعلى.

المواصفات

اللوحة العليا/الأمامية/الخلفية

<عليا>

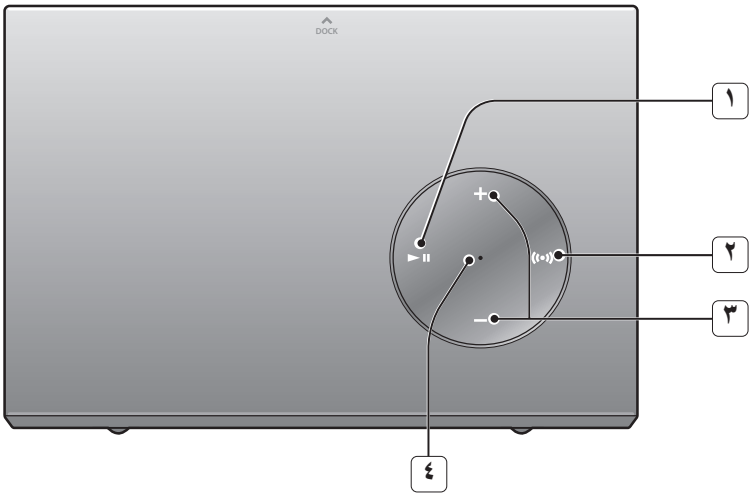

<أمامية>

<خلفية>

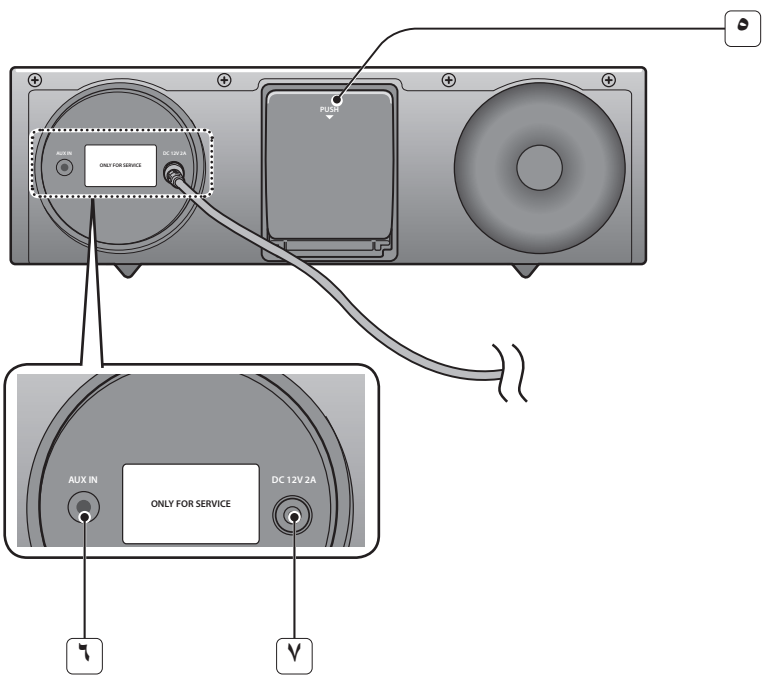

١	**زر PLAY/PAUSE (تشغيل/إيقاف مؤقت)**	لتشغيل ملف موسيقى أو إيقافه مؤقتاً.
٢	**زر BAS**	لتحسين الصوت كما تحب.
٣	**زر VOLUME +/- (رفع/خفض مستوى الصوت)**	للتحكم في مستوى الصوت.
٤	**مصباح LED الخاص بوضع STANDBY (الاستعداد)**	يضيء مصباح LED الخاص بوضع الاستعداد في وضع الاستعداد. يتم إيقاف تشغيل مصباح LED الخاص بوضع الاستعداد عندما يتم تشغيل تيار الوحدة.
٥	**DUAL DOCK (نظام الإرساء المزدوج)**	يوفر قاعدة إرساء تشتمل على خمس سنون لأجهزة Galaxy من Samsung أو قاعدة إرساء تشتمل على 30 سنًا لأجهزة Apple.
٦	**AUX IN (مدخل إضافي)**	قم بإجراء التوصيل بخرج تناظري لجهاز خارجي.
٧	**12 فولت تيار مستمر**	قم بتوصيل مهايئ التيار المستمر الخاص بالوحدة بهذا المقبس.

- عند تشغيل هذه الوحدة، ستكون هناك فترة تأخير لمدة ٤ إلى ٥ ثوان قبل صدور الصوت.

- يمكن توصيل هذه الوحدة بالأجهزة المحمولة ذات مستويات خرج الصوت العالية. عند توصيل هذه الوحدة بالأجهزة الخارجية ذات مستويات خرج الصوت العالية، قد تخفض خرج الصوت لحماية مضخم الصوت والسماعات.
- عند فصل كابل التيار الكهربي من المأخذ الجداري، أمسك المقبس.
  لا تقم بسحب الكابل.

وحدة التحكم عن بعد

استعراض وحدة التحكم عن بُعد

الزر POWER (تشغيل)
لتشغيل المنتج وإيقاف تشغيله.

زر FUNCTION (وظيفة)
لتحديد وضع الوظيفة.

الزر PLAY/PAUSE (تشغيل/إيقاف موقت)
لتشغيل ملف موسيقى أو إيقافه مؤقتا.

الزر CONTROL (تحكم)
للبحث عن ملف موسيقى تالٍ أو سابق.

الزر MUTE (كتم الصوت)
لكتم الصوت الصادر من هذه الوحدة. اضغط عليه مرة أخرى لاستعادة مستوى الصوت السابق.

مستوى الصوت
لضبط مستوى الصوت بالوحدة.

الزر BASS (الجهير)
لتحسين الصوت كما تحب.

تركيب البطارية في وحدة التحكم عن بُعد

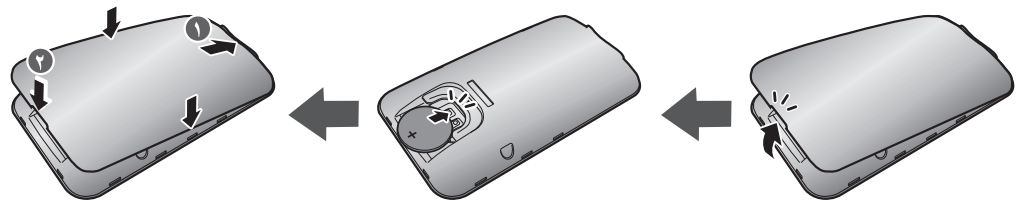

١. افتح غطاء وحدة التحكم عن بعد بوضع ظفرك في الفتحة بين الغطاء وجسم وحدة التحكم عن بعد.
بعد ذلك، ارفع الغطاء وقم بفصله تمامًا.

٢. قم بتركيب بطارية الليثيوم جهد ٣ فولت.
أدخل البطارية في حجيرة البطاريات في وضع يكون فيه القطب + لأعلى.

٣. قم بتركيب غطاء وحدة التحكم عن بعد بها. أدخل الجانب العلوي أولاً ثم قم بخفض الغطاء حتى يحاذي جسم وحدة التحكم عن بعد، ثم اضغط على الغطاء تجاه الجسم من خلال دفع الحواف لأسفل بيدك.

▪ توخ الحذر حتى لا يعلق ظفرك في الفتحة عند رفع الغطاء. قد تضر بإصبعك.

نطاق تشغيل وحدة التحكم عن بعد

يمكن استخدام وحدة التحكم عن بعد لمسافة تصل إلى ٢٣ قدمًا (٧ أمتار) في خط مستقيم من الوحدة. كما يمكنك تشغيل وحدة التحكم عن بعد بزاوية أفقية تصل إلى ٣٠ درجة من مستشعر وحدة التحكم عن بعد.

التشغيل والتحكم بمستوى الصوت

التشغيل/إيقاف التشغيل

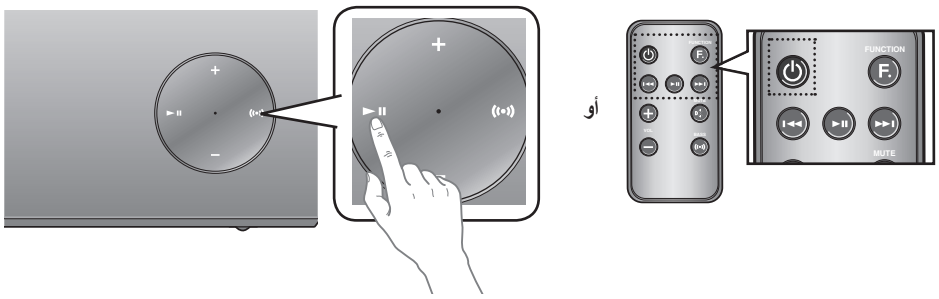

١. لتشغيل هذه الوحدة، اضغط على أي زر في اللوحة للوحدة عندما تكون الوحدة في وضع الاستعداد.

أو،

اضغط على **POWER (تشغيل)** بوحدة التحكم عن بعد.

٢. لإيقاف تشغيل هذه الوحدة، اضغط على الزر ►II باللوحة العليا للوحدة لمدة تزيد عن ٣ ثوانٍ.

أو،

اضغط على **POWER (تشغيل)** بوحدة التحكم عن بعد مرة أخرى.

- يتم تشغيل مصباح LED الخاص بوضع الاستعداد عندما يتم توصيل قابس التيار المتردد بمنفذ الحائط ويتم إيقاف تشغيل تيار الوحدة. يتم إيقاف تشغيل مصباح LED الخاص بوضع الاستعداد عندما يتم تشغيل تيار الوحدة.
- يتم إيقاف تشغيل الوحدة تلقائيًا في حالة عدم إجراء إدخال لمدة ٢٠ دقيقة.

ضبط مستوى الصوت

استخدم أزرار +،- لضبط مستوى الصوت. كلما قمت بضبط مستوى الصوت، يومض مصباح LED الخاص بوضع الإدخال.

يبقى مصباح LED قيد التشغيل في حال قمت بزيادة مستوى الصوت عندما يكون مضبوطًا على الحد الأقصى بالفعل، أو قمت بخفض مستوى الصوت عندما يكون مضبوطًا على الحد الأدنى بالفعل.

اضغط على زر **VOL +/–** (رفع/خفض مستوى الصوت) في الجانب الأيمن من اللوحة العليا.

أو،

اضغط على **VOL +/–** بوحدة التحكم عن بعد.

- يتم رفع مستوى الصوت أو خفضه عند الضغط على الزر VOL +/–.
- يمكنك أيضًا استخدام مفاتيح التحكم بمستوى الصوت بالأجهزة المتصلة باستخدام نظام الإرساء المزدوج أو البلوتوث للتحكم بمستوى الصوت. لاحظ أنه من الممكن أن تكون قدرتك محدودة لاستخدام مفاتيح التحكم في مستوى الصوت بالأجهزة المتصلة باستخدام البلوتوث للتحكم بمستوى.

التوصيلات

استخدام غطاء المباعد

استخدم غطاء المباعد عند تركيب أجهزة Galaxy أو Apple بنظام الإرساء المزدوج الذي لا يشتمل على أغلفة واقية. أو استخدمه لتثبيت مستقر لجهازك مع الآخذ في الاعتبار شكل الجهاز.

مرفق أيضًا بنظام الإرساء المزدوج غطاء واقٍ لموصل أجهزة Apple المكون من ٣٠ سنًا. استخدم الغلاف الوقائي لموصل ٣٠ سن لتوصيل جهاز سامسونج جالاكسي بموصل ٥ سن.

راجع الرسوم التوضيحية أدناه للحصول على مزيد من المعلومات.

<لمستخدمي جهاز أبل>	<لمستخدمي جهاز جالاكسي>
للاستخدام عندما يكون لديك غلاف وقائي على جهازك أو لتثبيت مستقر مع مراعاة شكل الجهاز.	
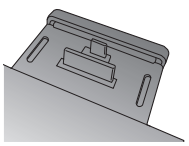	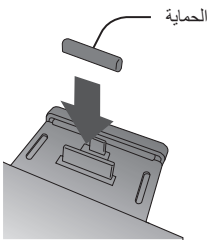
الاستخدام للأجهزة بدون الغلاف الوقائي.	
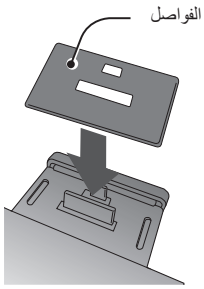	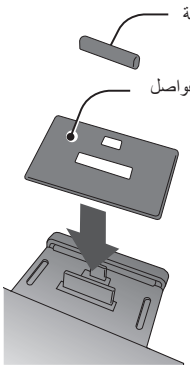

▪ لا يمكن إرساء جهاز بنظام الإرساء المزدوج وبه علبة يزيد سمكها عن ١,٥ ملم أو له قاعدة مستديرة غير عادية.

توصيل جهاز بنظام الإرساء المزدوج

كيفية توصيل جهاز بنظام الإرساء المزدوج.

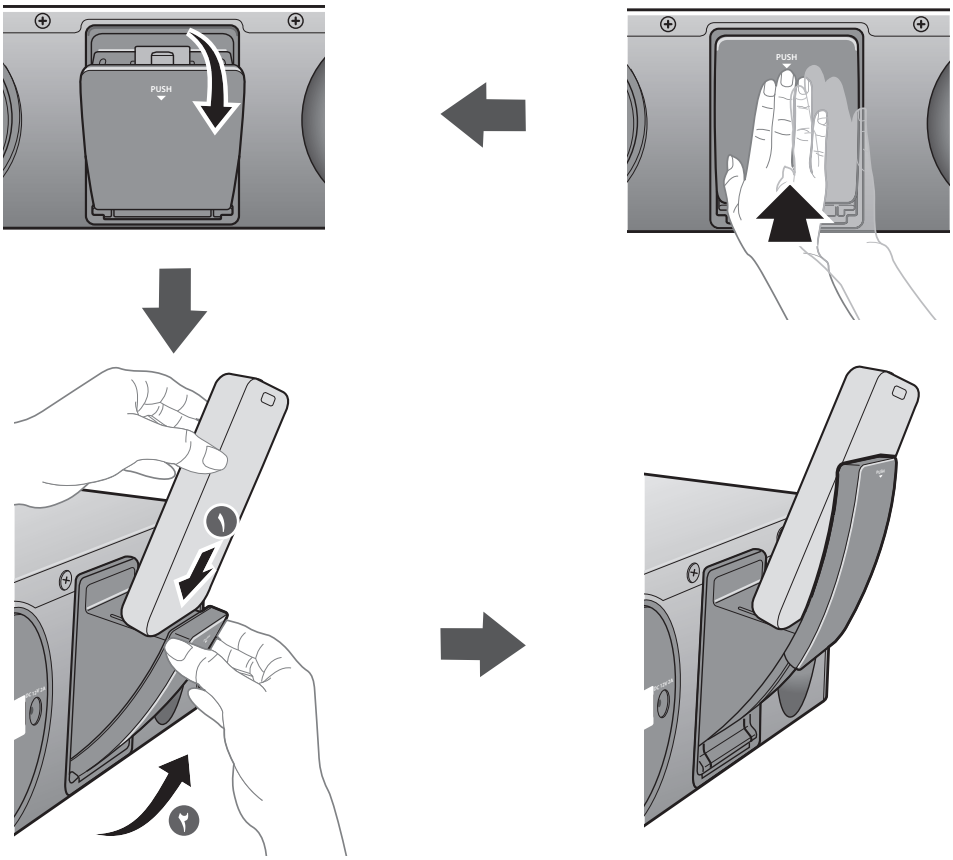

١. توجد حجيرة الإرساء **DUAL DOCK (الإرساء المزدوج)** في الجهة الخلفية للمنتج. لفتحها، ادفعها للداخل برفق.

٢. إذا كان لديك جهاز Galaxy من سامسونج، فقم بتوصيل الجهاز بموصل ذي خمسة سنون (أصغر حجمًا) لتوصيله بمنصة توصيل مزدوجة. وإذا كان لديك جهاز Apple، قم بتوصيل الجهاز بالموصل ذي الثلاثين سنًا (الأكبر) في نظام الإرساء المزدوج.

٣. ارفع دعامة الجهاز إلى أعلى كما هو موضح لمنع الجهاز من الانزلاق أو الوقوع من نظام الإرساء المزدوج.

- قم بتشغيل جهاز Samsung Galaxy قبل توصيله بنظام الإرساء المزدوج.
- لا تدعم هذه الوحدة الإرساء المتزامن لأجهزة Samsung Galaxy و Apple.
- قم بتوصيل جهاز Samsung Galaxy وApple بنظام Docking Audio قبل تشغيل وضع الإرساء. (انظر الصفحة ١٦)

توصيل جهاز الصوت باستخدام AUX IN (مدخل إضافي)

يوضح هذا الجزء كيفية توصيل الوحدة بجهاز الصوت.

تم تزويد هذه الوحدة بقابس صوت تناظري واحد لتوصيل جهاز الصوت.

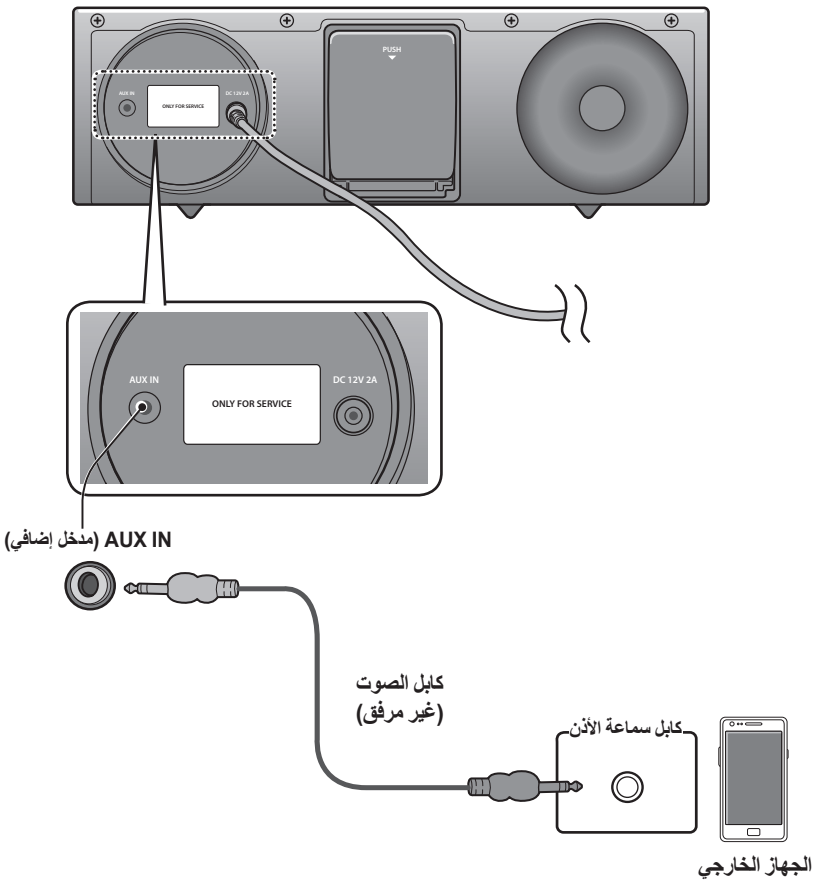

AUX IN (مدخل إضافي)

قم بتوصيل مقبس سماعة الأذن الخاص بالجهاز الخارجي أو جهاز الصوت بموصل AUX IN (الصوت) خلف الوحدة.

في حالة التوصيل بجهاز خارجي عبر الإدخال المساعد AUX أثناء إرساء جهاز Samsung Galaxy أو توصيله بجهاز Bluetooth في نفس الوقت، يتم تبديل مصدر الإدخال بين AUX وجهاز Samsung Galaxy أو جهاز Bluetooth بالنقر فوق الزر PAUSE (إيقاف مؤقت) بجهاز Samsung Galaxy / Bluetooth. انقر فوقه مرة أخرى للتبديل إلى مصدر الإدخال الآخر.

- استخدم مفتاح الوظائف الموجود على وحدة التحكم عن بُعد للتبديل ما بين الأجهزة المتصلة، إذا كان هناك أجهزة متعددة متصلة بمحطة التوصيل.
- قبل نقل المنتج أو تركيبه، تأكد من إيقاف تشغيله وفصل سلك الطاقة.

البلوتوث

يمكنك توصيل Wireless Audio with Dock بأجهزة Bluetooth والاستمتاع بموسيقى مع صوت استريو عالي الجودة، وكل هذا بدون أسلاك!

ما هو البلوتوث؟

تتيح تقنية البلوتوث للأجهزة المتوافقة مع البلوتوث إمكانية التوصيل فيما بينها بسهولة باستخدام اتصال لاسلكي قصير.

- قد يسبب جهاز البلوتوث تشويشًا أو عطل، حسب الاستخدام، في الحالات التالية:
  - يتواصل جزءًا منك مع نظام استلام/إرسال جهاز Bluetooth أو Wireless Audio with Dock.
  - تعرضه للتفاوت الكهربي من العوائق التي تسببها الجدران، أو الأركان، أو حواجز تقسيم المكاتب.
  - تعرضه للتداخل الكهربائي من الأجهزة التي لها نفس نطاق تردد والتي تشمل الأجهزة الطبية وأفران الميكروويف وشبكات الاتصال المحلية اللاسلكية.
- حافظ على أن يكون نظام Wireless Audio with Dock وجهاز Bluetooth بالقرب من بعض أثناء الإقران.
- كلما زادت المسافة بين Wireless Audio with Dock وجهاز Bluetooth، قلت الجودة. إذا تجاوزت المسافة نطاق تشغيل البلوتوث، فسيتم فقد الاتصال.
- في المناطق التي كون فيها حساسية الاستقبال ضعيفة، قد لا يعمل اتصال البلوتوث بشكل سليم.
- يعمل اتصال البلوتوث فقط عندما يكون جهاز البلوتوث قريبًا من الجهاز. يتم قطع الاتصال تلقائيًا إذا انتقل جهاز البلوتوث خارج النطاق. وحتى داخل النطاق، قد تتدهور جودة الصوت بسبب العوائق مثل الجدران أو الأبواب.
- قد يتسبب هذا الجهاز اللاسلكي في حدوث تداخل كهربائي أثناء تشغيله.

- من الممكن أن يتم طلب إدخال رمز PIN (كلمة مرور) أثناء اتصال جهاز Bluetooth بنظام Wireless Audio with Dock. عند ظهور نافذة إدخال رمز PIN، أدخل <0000>.
- يدعم Wireless Audio with Dock قاعدة بيانات SBC (44.1 كيلوهرتز، 48 كيلوهرتز).
- لا يتم دعم ميزة AVRCP (وضع التحكم عن بعد في الصوت والفيديو).
- قم فقط بتوصيل جهاز البلوتوث الذي يدعم وظيفة A2DP (وضع توزيع الصوت المتقدم) (الصوت والفيديو).
- لا يمكنك توصيل جهاز البلوتوث الذي يدعم وظيفة HF (حر اليدين) فقط.
- يمكن إقران جهاز بلوتوث واحد فقط في المرة الواحدة.
- بمجرد أن تغلق Wireless Audio with Dock ويتم قطع اتصال الإقران، فلن يتم استعادة الإقران تلقائيًا. لإعادة الاتصال، يجب أن يتم إنشاء إقران الأجهزة مرة أخرى.
- من الممكن Wireless Audio with Dock أن لا يتم البحث أو الاتصال بشكل صحيح إلا في الحالات التالية:
  - إذا كان هناك أي حقل إلكتروني قوي حول جهاز Wireless Audio with Dock.
  - إذا كان هناك عدة أجهزة Bluetooth في وضع الإقران بشكل متزامن مع جهازWireless Audio with Dock.
  - إذا تم إيقاف تشغيل جهاز البلوتوث، أو لم يكن في مكانه، أو به خلل
  - لاحظ أن بعض الأجهزة مثل أفران المايكروويف ومحولات شبكات الاتصال المحلية اللاسلكية ومصابيح الفلورسنت و مواقد الغاز تستخدم نفس نطاق التردد كجهاز بلوتوث، والذي يمكن أن يتسبب في حدوث تداخل كهربائي.

التوصيل بأجهزة بلوتوث

يشرح هذا القسم كيفية اتصال جهاز Wireless Audio with Dock بأجهزة متوافقة مثل أجهزة Bluetooth.

لاتصال نظام Wireless Audio with Dock بجهاز Bluetooth

قبل البدء، تأكد من أن جهاز البلوتوث يدعم تشغيل سماعة الرأس استريو المتوافقة مع البلوتوث.

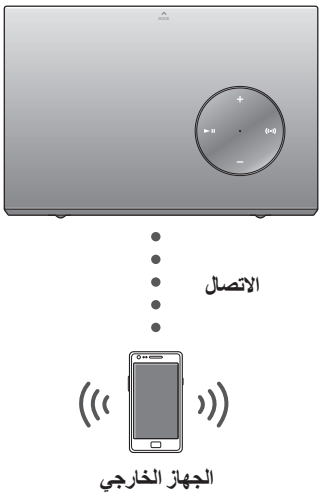

١. حدد قائمة بلوتوث على جهاز البلوتوث.
(ارجع إلى دليل مستخدم جهاز البلوتوث لمعرفة الإرشادات.)

٢. ابحث عن جميع الأجهزة أو سماعات الرأس.

- سيتم عرض قائمة بالأجهزة.

٣. حدد "**[Samsung]W_Audio XXXXXX** " من القائمة التي تم البحث فيها.

- • إذا فشل جهاز Bluetooth في الإقران مع Wireless Audio with Dock, قم بحذف "[Samsung]W_Audio XXXXXX " الذي تم العثور عليه من خلال جهاز Bluetooth ثم ابحث عن، Wireless Audio with Dock مرة أخرى, وأعد الخطوات رقم 1 و2 و3.

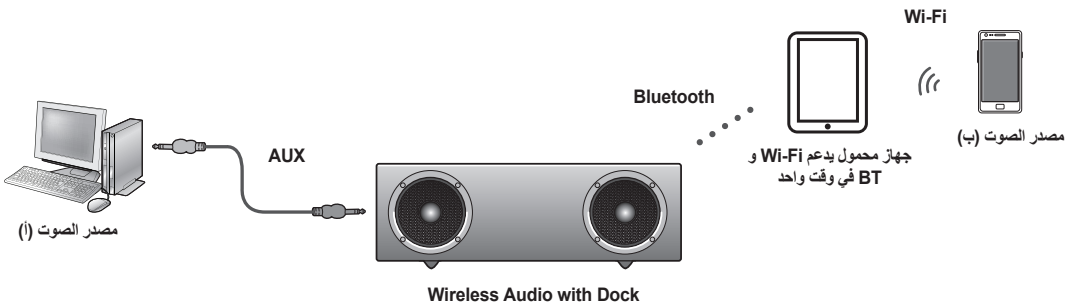

▪ عندما يعمل AUX وBluetooth في نفس الوقت كما هو موضح بالأعلى، فإنه من الممكن يأتي الصوت من كلاهما بشكل متزامن معًا.

التشغيل

استخدام وضع الإرساء مع أجهزة SAMSUNG GALAXY وأجهزة APPLE

قم بتوصيل جهاز Samsung Galaxy أو Apple بنظام Docking Audio. (انظر الصفحة ١٢)

<أجهزة Samsung Galaxy>

لاستخدام جهاز Samsung طراز Galaxy مع نظام الإرساء المزدوج، يجب تنزيل تطبيق وضع الإرساء من Android Market وتثبيته على الجهاز. للتنزيل، اتبع الخطوات التالية:

١. اضغط على رمز مخزن التشغيل (Android Market) داخل الشاشة الرئيسية لجهاز Samsung Galaxy.

٢. انقر فوق رمز البحث على الشاشة للوصول إلى شريط البحث.

٣. في شريط البحث، اكتب [**Samsung Wireless Audio with Dock**] ثم قم بإجراء البحث.

٤. في قائمة نتيجة البحث، ابحث عن [**Samsung Wireless Audio with Dock**] ثم انقر فوقها لبدء التنزيل.

٥. اضغط على [**Install (تثبيت)**].

لتشغيل الموسيقى، اتبع الخطوات التالية:

١-١. إذا كنت ستبدأ التطبيق عندما يكون Wireless Audio with Dock الجهاز الوحيد المتصل بجهاز Bluetooth، قم باختيار زر "التشغيل" من جهازك تلقائيًا ليقوم بإنشاء اتصال مع Wireless Audio with Dock ووحدة تشغيل الموسيقى.

١-٢. ١-٢. إذا كانت هناك أجهزة متعددة متصلة بـ Bluetooth منها Wireless Audio with Dock,
١) ستظهر قائمة التطبيقات التي يمكنها الاتصال بـ Wireless Audio with Dock عندما تبدأ في تشغيل التطبيقات.

٢) قم بتشغيل الموسيقى بعد الاتصال بـ Wireless Audio with Dock من خلال اختياره من داخل قائمة الأجهزة.
- إذا كان جهاز Bluetooth في وضع الإقران مع جهاز Wireless Audio with Dock من قبل, فإنه لن يظهر في القائمة وسيتم الاتصال به تلقائيًا.

٢. إذا كنت تريد استبدال Wireless Audio with Dock التي قد كان في وضع الإقران مع هاتفك المحمول، يجب أن تقوم بحذف الإعدادات المتبقية المحفوظة في داخل جهازك قبل تشغيل وضع إقران جديد.

- **[Clear data (مسح البيانات)]** ← .

- بعد تشغيل التطبيق، لا يتعثر التشغيل عند شحن الجهاز المحمول بشاحن عادي.
- عندما تقوم باتصال أجهزة أخرى بجهاز Wireless Audio with Dock فإن بعد اتصال جهاز Samsung Galaxy في وضع الإرساء، من الممكن أن تغلق وضع Bluetooth الخاص بجهاز Samsung Galaxy.
- إذا واجهت مشكلة في توصيل جهاز Samsung Galaxy بنظام الإرساء المزدوج، فقم بإيقاف تشغيل وضع البلوتوث بالأجهزة الأخرى.

<Apple Device> (جهاز Apple)

١. حدد الوضع كما هو موضح أعلاه، ثم قم بتوصيل جهاز Apple بنظام الإرساء المزدوج كما هو موضح في القسم "توصيل جهاز بنظام الإرساء المزدوج" (صفحة ١٢). ستسمع صوت رنين.

٢. حدد قائمة <**الموسيقى**> داخل الشاشة الرئيسية في جهاز Apple.

٣. حدد الموسيقى المطلوبة وقم بتشغيلها.
- سيتم تشغيل الموسيقى من خلال مكبرات صوت جهاز Wireless Audio with Dock.

- أثناء تشغيل فيديو في جهازك، قد لا تتوفر عمليات التشغيل/الإيقاف المؤقت/التالي/رجوع. استخدم الزر في جهازك لتشغيله.

قائمة التوافق (جهاز Apple)

طرز iPod/iPhone المتوافقة مع وضع الإرساء
قم بتحديث برامج iPod/iPhone إلى أحدث إصدار قبل استخدامها مع هذه الوحدة.

- iPod touch (الجيل الرابع)
- iPod touch (الجيل الثالث)
- iPod nano (الجيل السادس)
- iPod nano (الجيل الخامس)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPod classic

• وفقًا لإصدار برنامج iPod، قد لا يكون جهازك متوافقًا أو قد يعمل بشكل غير عادي.

※ في حالة توصيل جهاز Apple غير متوافق، سيومض مصباح LED الخاص بالاستعداد.

استخدام وضع البلوتوث

قم باتصال جهاز Bluetooth بـ Wireless Audio with Dock. (انظر الصفحة ١٥)

لاتصال جهاز Bluetooth عندما يكون جهاز Wireless Audio with Dock في وضع Bluetooth، ابحث عن Wireless Audio with Dock داخل قائمة جهاز Bluetooth. حدد Wireless Audio with Dock, ثم اتصل. بمجرد أن يتم اتصال Wireless Audio with Dock قم بتحديد الموسيقى المطلوبة وتشغيلها.

• سيتم تشغيل الموسيقى من خلال مكبرات صوت جهاز Wireless Audio with Dock.

- إذا أردت تغيير الجهاز المتصل من خلال وضع البلوتوث بجهاز آخر، فقم بقطع اتصال الجهاز الحالي وجرب توصيله بالجهاز الآخر الذي تريد استخدامه.
- أثناء إجراء اتصال بلوتوث، قد لا تتوفر عمليات Play/Pause/Next/Back (تشغيل/إيقاف مؤقت/التالي/رجوع) وفقًا للجهاز المحمول والتطبيق المستخدم.
- من المحتمل أن يسبب تشغيل Bluetooth مقترن مع جهاز Wireless Audio with Dock تقطع الصوت في حالة إذا تم تشغيله أثناء تشغيل نظام Wireless Audio with Dock لملف من مدخل AUX.

قم بقطع اتصال جهاز Bluetooth بـ Wireless Audio with Dock

يمكنك إلغاء إقران Bluetooth من Wireless Audio with Dock. لمزيد من الإرشادات، يمكنك مشاهدة دليل مستخدم جهاز Bluetooth.

• بجهاز Wireless Audio with Dock.

- يعمل اتصال البلوتوث فقط عندما يكون قريبًا من الجهاز. سيتم قطع الاتصال تلقائيًا إذا كانت المسافة خارج هذا النطاق. وحتى داخل هذا النطاق، قد تتدهور جودة الصوت بسبب العوائق مثل الجدران أو الأبواب.
- إذا عاد جهاز البلوتوث إلى النطاق الفعال، فيمكنك إعادة تشغيله لاستعادة الإقران مع جهاز البلوتوث.

الوظائف

وظائف متقدمة

تشغيل/إيقاف مؤقت

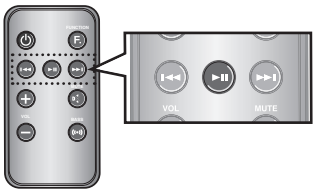

أثناء التشغيل، اضغط على الزر ►II.

- اضغط على الزر ►II مرة أخرى لإيقاف تشغيل الملف مؤقتًا.
  اضغط على الزر ►II لتشغيل الملف المحدد.

▪ لا تعمل هذه الوظيفة في وضع Aux (إضافي).

استخدام الوظيفة

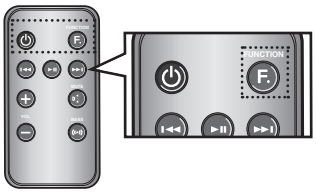

قم بتغيير الوضع للتحويل إلى مصادر التوصيل وAUX.

اضغط على **FUNCTION** في وحدة التحكم عن بعد الخاصة بهذه الوحدة.

- في كل مرة يتم فيها الضغط على هذا الزر، يتغير التحديد كما يلي:
  iPod (iPhone) ← Galaxy (Bluetooth) ← وضع AUX

▪ تحقق من الوظيفة التي ترغب باستخدامها عن طريق الضغط على زرFunction (الوظائف) الموجود على وحدة التحكم عن بُعد عندما يتم توصيل أجهزة متعددة بهذا المنتج في آن واحد.

التخطي للأمام/للخلف

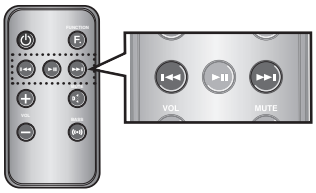

أثناء التشغيل، اضغط على الزر I◄◄,►►I.

- عند وجود أكثر من ملف وقد قمت بالضغط على الزر ►►I، يتم تحديد الملف التالي.
- عند وجود أكثر من ملف وقد قمت بالضغط على الزر I◄◄، يتم تحديد الملف السابق.

▪ لا تعمل هذه الوظيفة في وضع Aux (إضافي).

كتم الصوت

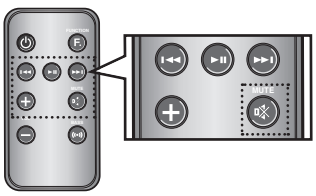

تعد هذه الوظيفة مفيدة عند الحاجة للرد على جرس الباب أو الهاتف الخلوي.

١. لكتم صوت هذه الوحدة ، اضغط على الزر **MUTE** ( ) (كتم الصوت) في وحدة التحكم عن بعد.

٢. اضغط على **MUTE** ( ) (كتم الصوت) في وحدة التحكم عن بعد مرة أخرى (أو اضغط على **VOLUME +/–** (رفع/خفض مستوى الصوت)) لاستعادة الصوت.

استخدام وظيفة BASS(الجهير)

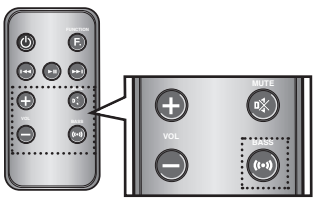

تتيح لك تحسين صوت الجهير كما تحب.

اضغط على **BASS (الجهير)** في وحدة التحكم عن بعد الخاصة بهذه الوحدة.

- في كل مرة يتم فيها الضغط على هذا الزر، يتغير التحديد كما يلي:
  BASS ON → OFF (تشغيل صوت الجهير ← إيقاف)

استكشاف الأخطاء وإصلاحها

قبل طلب الخدمة، يرجى التحقق مما يلي.

الأعراض	الفحص	الحل
لن يتم تشغيل الوحدة.	• هل سلك الطاقة متصل بالمأخذ؟	• قم بتوصيل قابس التيار الكهربي بالمأخذ.
الوظيفة لا تعمل عند الضغط على الزر.	• هل تعرض جهاز Wireless Audio with Dock أو جهاز التحكم لكهرباء ساكنة؟	• افصل قابس التيار الكهربي وقم بتوصيلة مرة أخرى.
لا يصدر الصوت.	• هل الوحدة متصلة بالجهاز بشكل سليم؟ • هل تم تشغيل وظيفة كتم الصوت؟ • هل تم ضبط مستوى الصوت على أدنى مستوى؟	• قم بتوصيله بشكل سليم. • اضغط على زر Mute (كتم الصوت) لإلغاء الوظيفة. • اضبط مستوى الصوت.
لا تعمل وحدة التحكم عن بُعد.	• هل نفدت طاقة البطاريات؟ • هل المسافة بين وحدة التحكم عن بعد والوحدة الرئيسية بعيدة جدًا؟	• استبدل البطاريات بأخرى جديدة. • قم بالتشغيل بالقرب من الوحدة الرئيسية.

الملحق

المواصفات

اسم الطراز	DA-E570

عام	وزن	2.0 كجم
	الأبعاد (العرض x العمق x الارتفاع)	299.7 × 169.9 × 94 مم
	نطاق درجة حرارة التشغيل	من 5+ درجات مئوية إلى 35+ درجة مئوية
	معدل الرطوبة المسموح به للتشغيل	من 10 درجة مئوية إلى 75 درجة مئوية
مضخم الصوت	خرج الطاقة المقنن	5 وات/قناة، 4 أوم، إجمالي التشويه التوافقي = 10%، 1 كيلو هرتز
	حساسيةالإدخال/المعاوقة	800 ميللي فولت/20 كيلو أوم
	نسبة الإشارة/التشويش (إدخال تناظري)	65 ديسيبل
	الفصل (1 كيلو هرتز)	60 ديسيبل
استجابة التردد	الإدخال التناظري	من 20 هرتز إلى 22 كيلو هرتز (3± ديسيبل)
تقنين الإرساء	iPod	5 فولت 1.0 أمبير
	Galaxy	5 فولت 1.0 أمبير

* نسبة الإشارة/التشويش والتشوه والفصل والحساسية القابلة للاستخدام طبقًا للقياس باستخدام إرشادات AES (مؤسسة هندسة الصوت).

* المواصفات الاسمية

- تحتفظ شركة Samsung Electronics Co., Ltd المحدودة بحقها في تغيير المواصفات دون إشعار.
- الوزن والأبعاد تقريبية.
- فيما يتعلق بمصدر التيار الكهربي واستهلاك الطاقة، ارجع إلى الملصق المرفق بالمنتج.

للاتصال بشركة SAMSUNG في جميع أنحاء العالم

إذا كان لديك أية أسئلة أو تعليقات تتعلق بمنتجات Samsung، فيرجى الاتصال بمركز رعاية عملاء Samsung.

المنطقة	مركز الاتصالات ☎	موقع الويب
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

ENERGY STAR

Code No. AH68-02475K (00)